

IMPORTANT NOTE :


Do not mount any hooks on Dual-Touch Xtender. Maximum capacity for Dual Touch Bike Stand with Xtender is 4 hooks. (two hooks on each side).

Make sure to read all instructions and follow the installation procedures in the Dual-Touch Bike Stand manual before mounting the stand.


Manual downloads :
www.topeak.com/Service/Downloads

INSTALLATION



1
Dual-Touch
Bike Stand

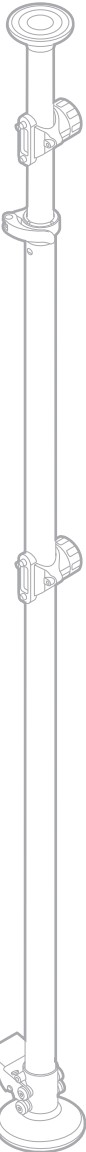

2
Remove Ceiling
Rubber Top.

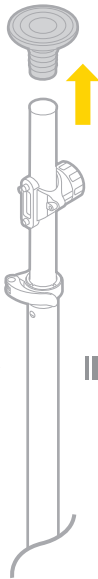

3
Loosen the bolt to mount
Dual-Touch Xtender.

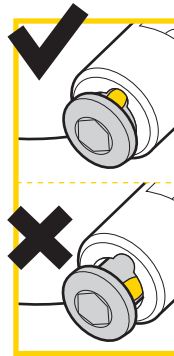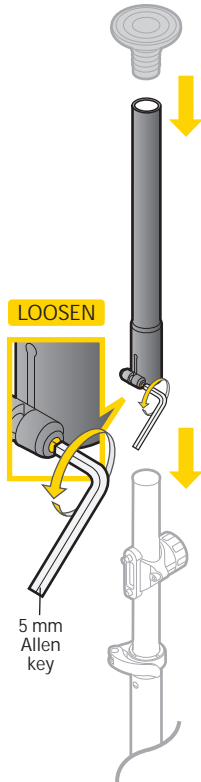

4
Tighten the bolt to
fix Dual-Touch
Xtender on Dual-
Touch Bike Stand
securely.

TIGHTEN

Recommended
Torque

3 Nm

* Tool required : 5 mm Allen key

WARRANTY

2-year Warranty: All mechanical components against manufacturer defects only.

Warranty Claim Requirements

To obtain warranty service, you must have your original sales receipt. Items returned without a sales receipt will assume that the warranty begins on the date of manufacture. All warranties will be void if the product is damaged due to user crash, abuse, system alteration, modification, or used in any way not intended as described in this manual.

* The specifications and design are subject to change without notice.

Please contact your Topeak dealer with any questions.

For USA customer service call : 1-800-250-3068

www.topeak.com

Copyright © Topeak, Inc.

M-TW004-SP04-GB 6/12