


1. Always fully expand supporting legs for a steady foundation.

- 2. When setting up bike, make sure Quick Release Clamp Levers are tightened.
- 3. Keep main unit parallel with one of the Support Legs for stability.
- 4. Maximum weight capacity: 25 kg (55 lb)
- Always use both hands to fold main unit, otherwise main unit may pinch your fingers and cause injury.
- Always make sure the Quick Release Clamp levers and adjusting knobs are securely locked after mounting bike.




NOTE OF BB HOLDER




If the frame does not fit the BB cradle properly, install the BB Holder* on fences of the bottom bracket cradle for stability.

* Compatible with regular frames.



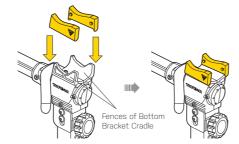

OPTIONAL ACCESSORIES

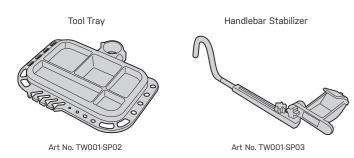

WARRANTY

2-year Warranty: All mechanical components against manufacturer defects only.

Warranty Claim Requirements

To obtain warranty service, you must have your original sales receipt. Items returned without a sales receipt will assume that the warranty begins on the date of manufacture. All warranties will be void if the product is damaged due to user crash, abuse, system alteration, modification, or used in any way not intended as described in this manual.

* The specifications and design are subject to change without notice.


Please contact your Topeak dealer with any questions. For USA customer service, call: 1-800-250-3068 www.topeak.com

Copyright © Topeak, Inc. 2016 M-TW013-GB 05/16

W


PREPSTAND™ RACE

USER'S GUIDE

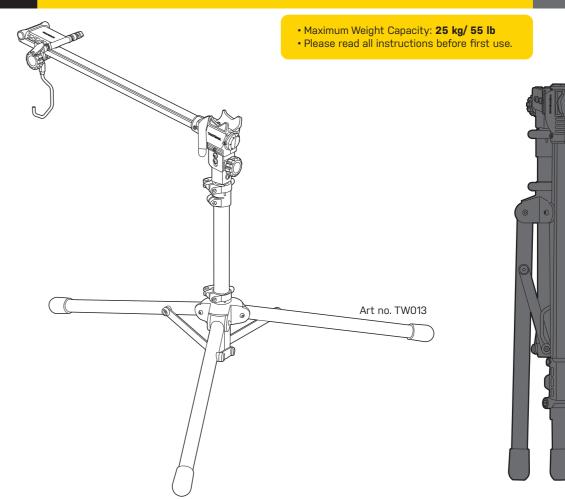





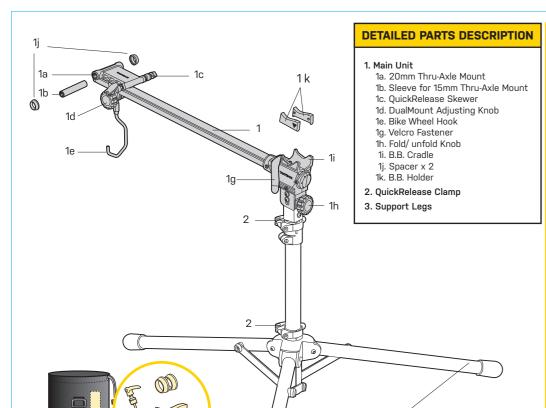


A IMPORTANT

* For Quick Release Skewer



PrepStand™ Race can be fitted with Quick Release Fork or 2 type rear dropout widths (130 and 135mm) by changing the positions of shims as below.

Install bikes with Quick Release Fork




Install bikes with Rear Dropout

For 130 mm Rear Dropout (Road Bike)




For 135 mm Rear Dropout (Mountain Bike)





MAIN UNIT ADJUSTMENT

Unfold the Main Unit by turning the Fold / Unfold Knob counter clockwise.





Lock the Main Unit by turning the Fold / Unfold Knob clockwise.

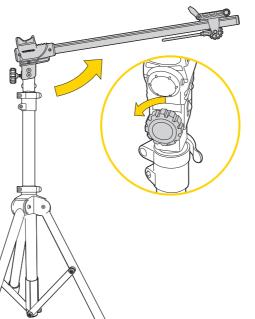

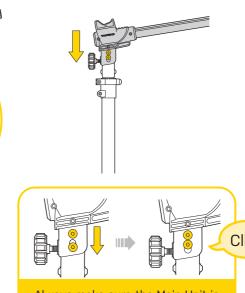



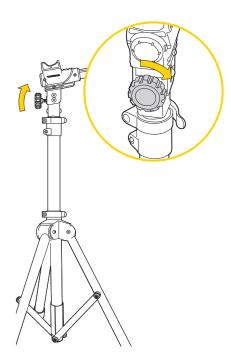


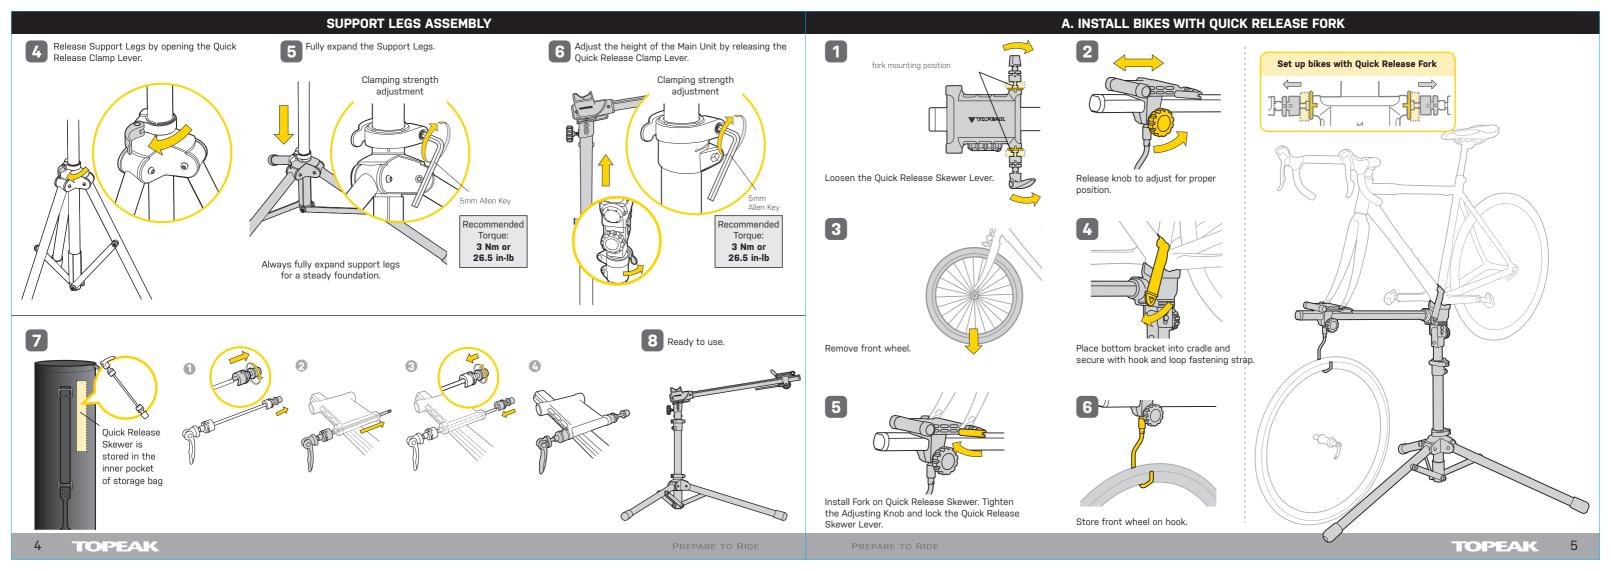



Remove axle first.


Release Adjusting Knob and reinstall the DualMount from opposite

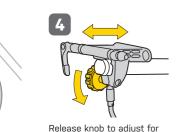



proper position.

Remove front wheel.

3

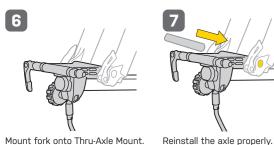


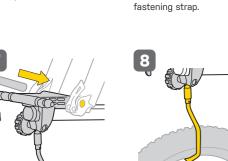

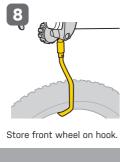


Place bottom bracket into cradle

and secure with hook and loop

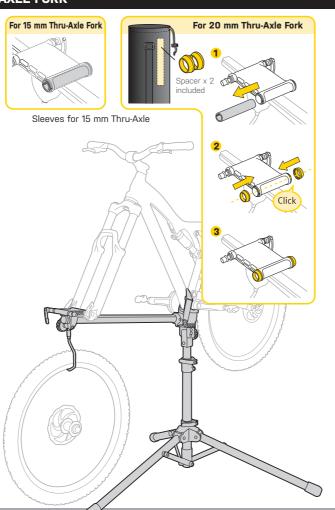



C. INSTALL BIKES WITH REAR DROPOUT FOR MAINTAINING FRONT BRAKE

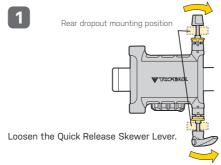




Remove rear wheel carefully.

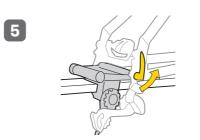




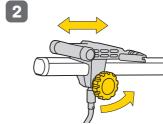

Release knob to adjust for proper position.



Place bottom bracket into cradle and secure with hook and loop fastening strap.

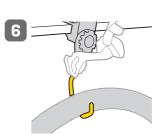

Store rear wheel on hook.

